


CleanZone Premier



Cobalt

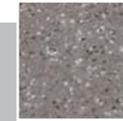

Titanium



Midnight



Slate

CleanZone Premier is a High Performance Contamination Control Zone designed to attract, collect and retain foot & wheel borne contamination, preventing particles and microbes from getting into your critical areas. Dycem CleanZone is available in a range of attractive designs which means that it still looks good between wet cleaning. Suitable for light wheeled traffic and heavier pedestrian flows. Available in a range of fixed mats or floor coverings to suit your facilities needs.

Where to use

- All entrances to prevent ingress of contamination.
- All exits to stop contamination.
- In gowning rooms, hallways, entryways, transfer hatches and airlocks.
- Inside the areas adjacent to critical manufacturing and processes to prevent contaminants from reaching heights where they can affect product yields.

Active working System

CleanZone is designed to be an active working zone which attracts, collects and retains foot, wheel and airborne contamination.


Easy to Clean

CleanZone is quick and easy to clean, it can be incorporated as part of your regular wet cleaning schedule. Simply clean the surface of the zone with a damp sponge and detergent. Squeegee dry and then wipe up the detergent and contaminant residue.

Dycem products contain an integral anti-microbial additive, BioMaster. Our products have been successfully tested against 50 common organisms including Salmonella, E.coli, Listeria, Campylobacter, Pseudomonas, A.Niger (black spot mould growth), and Algae. The BioMaster additive also helps combat MRSA.

Product Information

Floor Coverings	Bespoke sizes/shapes readily available
Load Resistance	70Kg/cm (1000 lbs/in ²)
Co-Efficient of Friction	3.5 μ
Heat Resistance	Working range 0 ^o c to 50 ^o c
Colour	Please see swatches above, other colours available upon request.
Anti-microbial	Dycem products incorporate Biomaster.
Toxicity	Non-Toxic
ESD Features	10 ⁸
Outgassing	www.dycem.com/purity
Chemical resistance	www.dycem.com/chem
Warranty	3 years
Expected Life	3-5 years

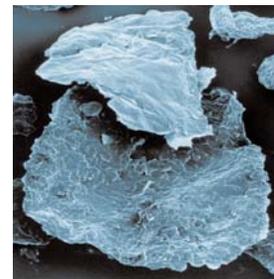

For further details of these tests and purity information on outgassing please visit www.dycem-cc.com/tpapers


Please contact us for specialist advice on the right option for your facility:

UK +44 (0) 117 955 9921 or email: uk@dycem.com

USA 1-800 458 0060 or email: info@dycemusa.com



ProtectaMat - is a loose laid mat designed to control foot and wheel borne contamination. The ProtectaMat is also available with a self-adhesive backing option for heavier wheeled traffic.



CleanZone - is a High Performance Contamination Control Zone designed to attract, collect and retain viable and non-viable contamination. Suitable for light wheeled traffic and heavier pedestrian flows. Available in a range of mat or floor covering options to suit your facilities needs.



WorkZone - is a heavy duty version of CleanZone designed for use where there are concerns about contamination and cross contamination from personnel, and the wheels of carts including pallet trucks, fork lifts, trolleys & vessels.



Cleaning - Dycem recommend their high performance range of cleaning products and equipment, designed to maximise product performance and life cycle.



Bench Mat - prevents movement of components and loss of small items. Improves accuracy, precision and assembly time and great for stabilising fragile laboratory equipment.



Non-slip products - Dycem Non-Slip products are non-sticky but amazingly grip to any surface without the use of an adhesive. They effectively cushion, stabilise and protect products and equipment. Dycem Non-Slip is available in a range of product options including reels, mats, self-adhesive panels and discs.



Dycem Ltd, Ashley Trading Estate,
Bristol, BS2 9BB, United Kingdom
Tel: +44 (0) 117 955 9921
Fax: +44 (0) 117 954 1194
Email: uk@dycem.com

Dycem Ltd USA, 83 Gilbane Street,
Warwick, RI 02886, USA
Tel: 1-800 458 0060
Fax: 401 739 9634
Email: info@dycemusa.com

www.dycem.com




Certificate No. FM23716
ISO 9001:2009

Distributed by:



CleanZone Premier

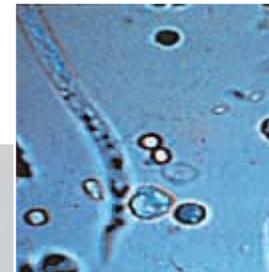

Stops contamination in its tracks

High Performance
Contamination Control Zones

www.dycem.com