

ProtectaMat

The Dycem ProtectaMat is a High Performance Contamination Control Zone. It effectively attracts, collects and retains foot and wheel borne contamination, preventing particles and microbes from getting into and out of your critical areas. The ProtectaMat is available as a loose laid mat or with a self adhesive backing option for heavier wheels and carts.

Where to use

- All entrances to prevent the ingress of contamination.
- All exits to stop the spread of contamination and cross contamination.
- Inside the critical area adjacent to critical products and processes to prevent contaminants from reaching critical airborne height.

Active working system


The ProtectaMat is designed to be an active working zone which attracts, collects and retains foot, wheel and airborne contamination.

Easy to Clean

Quick and easy to maintain. Simply clean the surface of the mat with a damp sponge and detergent. Squeegee dry and wipe up the detergent and contaminant residue. The mat is then immediately ready for re-use. Please see our web site for full cleaning instructions.

Anti-Microbial

Dycem products contain an integral silver based anti-microbial additive. Our products have been successfully tested against 50 common organisms including Salmonella, E.coli, Listeria, Campilobacter, Pseudomonas, A.Niger (black spot mould growth), and Algae. The Biomaster additive also helps combat MRSA.

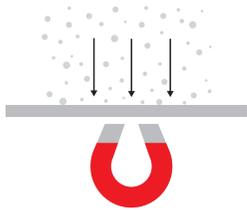

Short-range electromagnetic forces (Van der Waals) enable Dycem to attract, collect and retain over 99% of particles.



Product Information

| | |
|--------------------------|--|
| Product Options | 1) Loose laid 2) Self Adhesive backing (easy release) for lighter wheeled traffic. 1150 N/m 3) Self adhesive backing (industrial strength) for heavier wheeled traffic in industrial areas. 1600 N/m |
| Width x Length | 1.2m (4') x 2m (6'6") or 3m (10') or 4m (13')* |
| Thickness | 7mm (9/32")* |
| Load Resistance | 40Kg/cm (570 lbs/in ²) |
| Co-Efficient of Friction | 3.5 μ |
| Heat Resistance | working range 0 ^o c - 50 ^o c |
| Colour | Blue with red safety leaders |
| Toxicity | Non-Toxic |
| ESD Features | Neutral |
| Outgassing | www.dycem.com/purity |
| Chemical resistance | www.dycem.com/chem |
| Warranty | 2 years |
| Expected Life | 3-5 years |
| Specials | Bespoke sizes, backing and colours available, subject to volume. Please contact us for details. |

* All specifications are nominal.

For further details of these tests and purity information on outgassing visit www.dycem-cc.com/tpapers

Please contact us for specialist advice on the right option for your facility:

UK +44 (0) 117 955 9921 or email: uk@dycem.com

USA 1-800 458 0060 or email: info@dycemusa.com



ProtectaMat - is a loose laid mat designed to control foot and wheel borne contamination. The ProtectaMat is also available with a self-adhesive backing option for heavier wheeled traffic.



CleanZone - is a High Performance Contamination Control Zone designed to attract, collect and retain viable and non-viable contamination. Suitable for light wheeled traffic and heavier pedestrian flows. Available in a range of mat or floor covering options to suit your facilities needs.



WorkZone - is a heavy duty version of CleanZone designed for use where there are concerns about contamination and cross contamination from personnel, and the wheels of carts including pallet trucks, fork lifts, trolleys & vessels.



Cleaning - Dycem recommend their high performance range of cleaning products and equipment, designed to maximize product performance and life cycle.



BenchMat - prevents the movement of components and loss of small items. Improves accuracy, precision and assembly time. Great for stabilising fragile laboratory equipment.



Non-slip products - Dycem Non-slip products are non-sticky but amazingly grip to any surface without the use of an adhesive. They effectively cushion, stabilise and protect products and equipment. Dycem Non-slip is available in range of product options including reels, mats, self-adhesive panels and discs.



Dycem Ltd, Ashley Trading Estate,
Bristol, BS2 9BB, United Kingdom
Tel: +44 (0) 117 955 9921
Fax: +44 (0) 117 954 1194
Email: uk@dycem.com

Dycem Ltd USA, 83 Gilbane Street,
Warwick, RI 02886, USA
Tel: 1-800 458 0060
Fax: 401 739 9634
Email: info@dycemusa.com

www.dycem.com




Certificate No. FM23716
ISO 9001:2009

Distributed by:



ProtectaMat

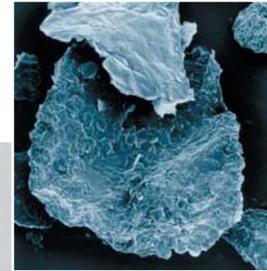

Stops contamination in its tracks

High Performance
Contamination Control Zones

www.dycem.com